


Install the straight ridge line braces using the clamps provided. Adjust the distance between the trusses so they are vertical by moving the brace in or out of the clamps before tightening the bolts. Use care that the straight brace is inserted at least past the round hole.

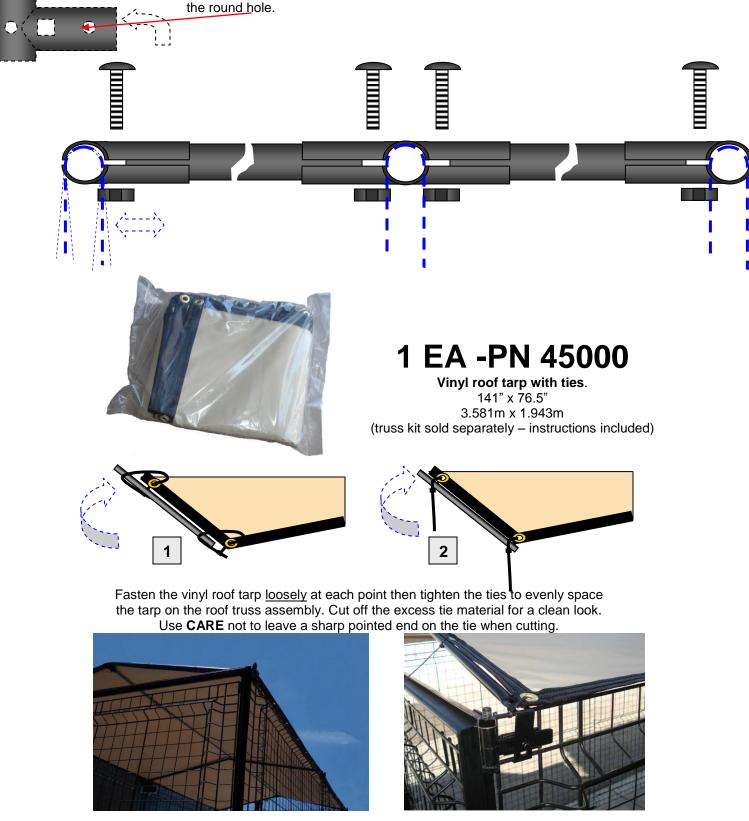

Caution: Kennels with roofs or tarps installed should be <u>anchored</u> to prevent them from being overturned in high winds. The roof is **not** designed for heavy snow loads.

Precaución: Las perreras con las azoteas o los tarps instalados se deben anclar para evitar que sean volcadas en fuertes vientos. La azotea no se diseña para las cargas pesadas de la nieve.